


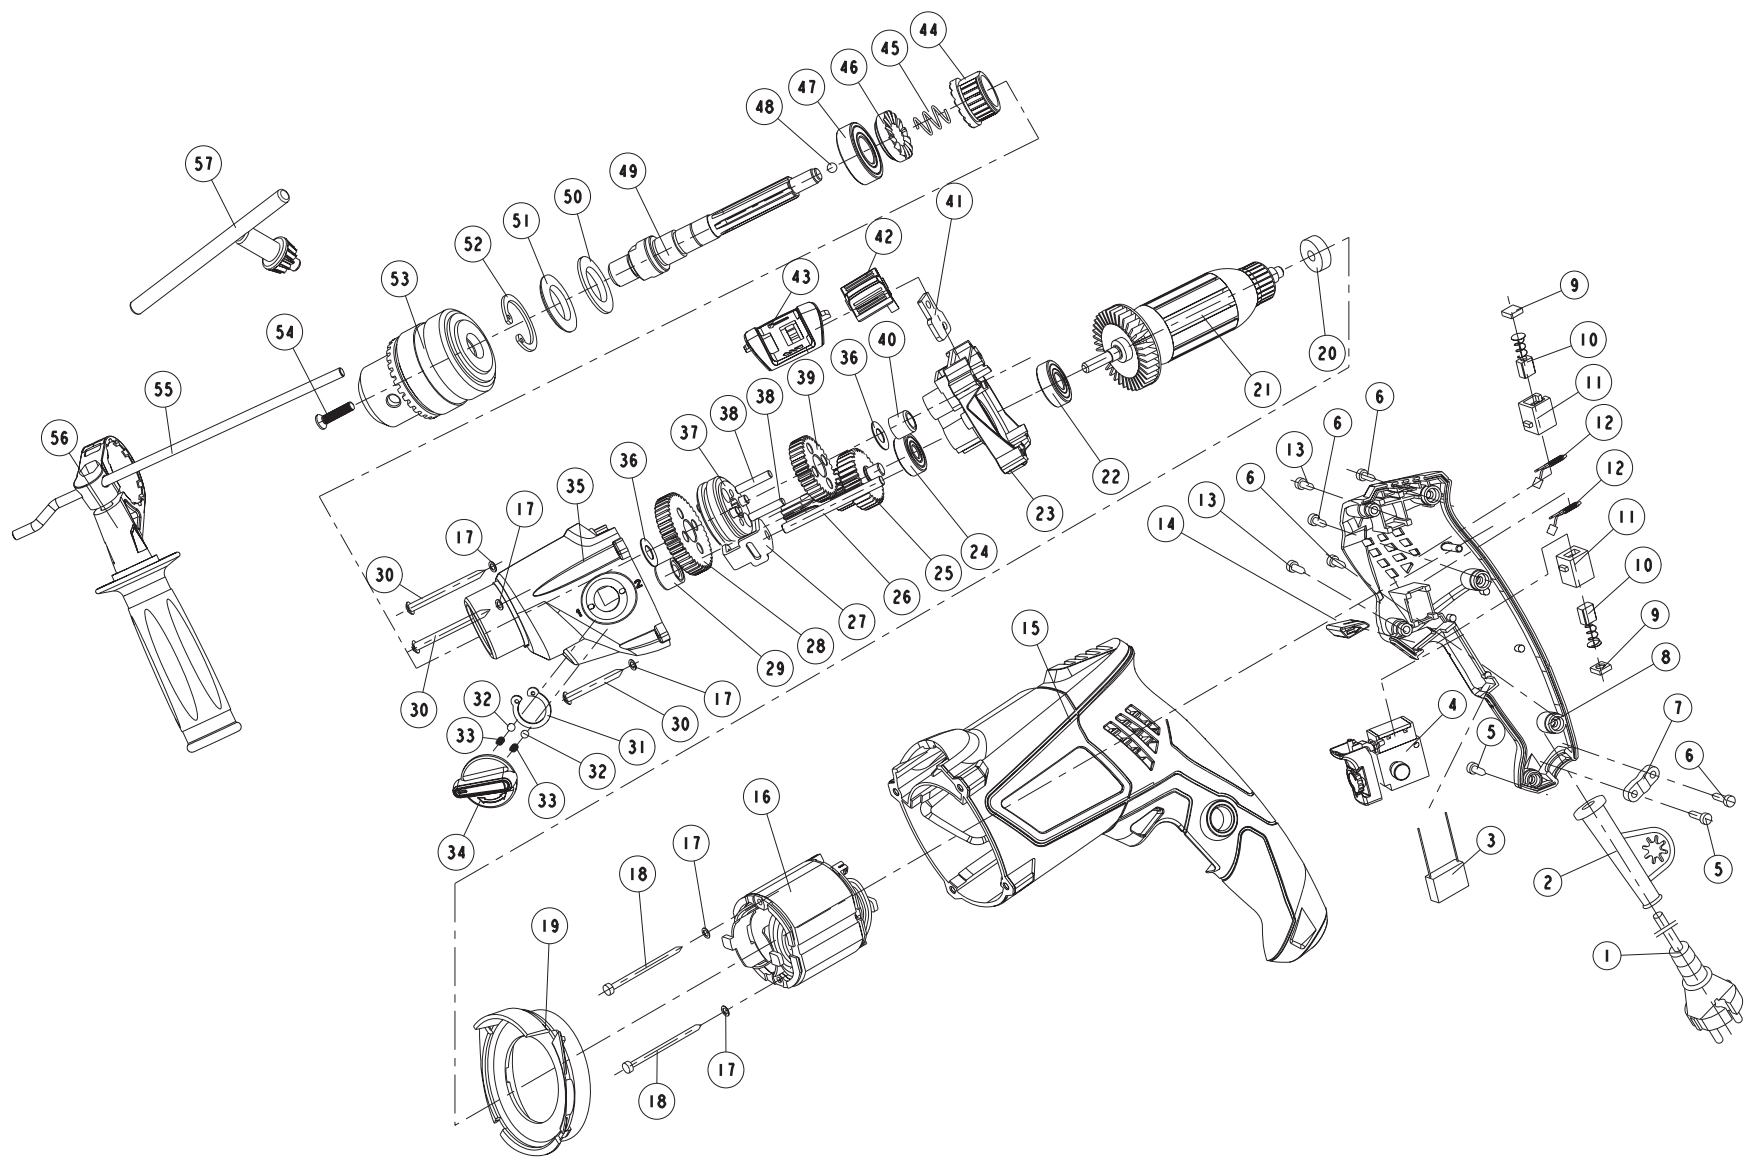

Marka:	TRESNAR
Model:	(4659)

Item No.	Part Name
1	Plug and cord
2	Cord rubber
3	Capacitor
4	Switch
5	Tapping screw
6	Tapping screw
7	Cord clip
8	Handle cover
9	Brush cap
10	Carbon brush
11	Brush holder
12	Inductor
13	Tapping screw
14	Power switch
15	Adonai housing
16	Stator
17	Plane washer
18	Tapping screw
19	Fan guide
20	Bearing
21	Rotor
22	Bearing
23	Supporter
24	Bearing
25	Middle gear
26	Pin
27	Slide
28	Slow gear
29	Bearing

Item No.	Part Name
30	Tapping screw
31	Circlip for shaft
32	Ball
33	Spring
34	Knob
35	Gear box
36	Washer
37	Clutch
38	Gudgeon
39	Quick gear
40	Bearing
41	Slide
42	Push button
43	Push button seat
44	Calm impact tooth
45	Spring
46	Act impact tooth
47	Bearing
48	Ball
49	Output spindle
50	Wool washer
51	Seal ring
52	Circlip
53	Chuck
54	Screw
55	Depth gauge
56	Side handle
57	Chuck key

Marka:	TRESNAR
Model:	(4659)